


Aurora Design Quick Start Guide

FMR/BTU/BT/USB 2.5

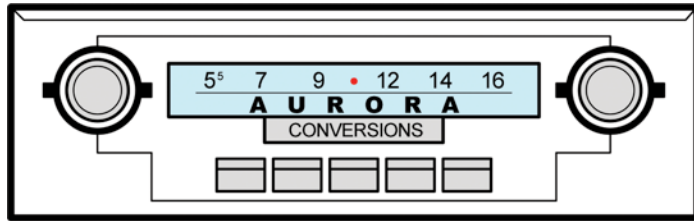

Basic Radio Control Actions



Virtual Fader



Virtual Balance



Loudness Toggle
On/Off



AVC Toggle
On/Off

Bluetooth/USB Control Actions



Pair/Voice Command
Conference Call



Pause/Play Music
Mute/Unmute Call



Next Song
Accept Call



Previous Song
Reject Call



Next Album
(USB sequential*)



Previous Album
(USB sequential*)

Seek/Scan Actions (motorized tuner)

↓ Seek



⇓ Scan

When in radio mode, press the Seek button once to seek to the next station. Double press the Seek button to start a scan. The radio will scan to the next station, pause and then continue until any button/action is executed.

Scan Action (standard tuner)



Start Scan



Stop Scan



Cancel Scan

When in radio mode, double twist the tuning knob to start a scan. (The dial pointer will not move while scanning) To stop on a station, turn the tuning knob. The station will be temporarily stored. To find the actual station on the dial, turn the tuning knob within 5 seconds of stopping the scan. When turning the dial in the correct direction, the radio will mute until the station is found.

Channel ID Voice Assist Action



In radio mode, this action will speak the frequency or channel ID for the current station.

Optional Bluetooth/USB Pushbutton Actions



Pair/Voice Command
Conference Call



Pause/Play Music
Mute/Unmute Call



Next Song
Accept Call



Previous Song
Reject Call



Next Album
(USB sequential*)



Previous Album
(USB sequential*)

↓ Quick press

↓ Press 1 second

⇓ Press & hold

Note: On Wonderbar® radios, once in the Bluetooth or USB mode, the seek button can be used in the same manor as the optional pushbutton described above. On Town & Country radios, the Country button will perform the actions on the left and the Town button will perform the actions on the right in the table above.

Note: Not all actions are available on all radios. Please consult your original manuals or contact your dealer for more information. To perform an Action, smoothly twist the control forward and back in the direction shown by the arrows, repeating for the number of arrows shown.

* Next/Prev Song in all other modes, BTU/USB 2.5 only