


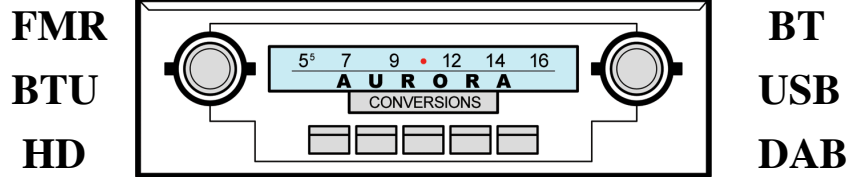


 

 





 

 























# Aurora Design Optional Pushbutton Quick Start Guide























## Radio Pushbutton Actions

- |  |  |
|--|--|
|   Status Voice Assist    |    Radio <sup>®</sup> Sub-channel<br><small>Digital AM &amp; FM</small> |
|   Virtual Fader          |   Virtual Balance  |
|   Auto Scan Start/Cancel |   Auto Scan Stop   |
|   Loudness/EQ*           |   AVC Toggle*  |
|   Next EQ/AVC*           |   Previous EQ/AVC*   |
|   Version            |   Factory Reset ***  |

## Bluetooth/USB Pushbutton Actions

- |   |   |
|---|---|
|   Pair/Voice Command<br>Conference Call |   Pause/Play Music<br>Mute/Unmute Call    |
|   Next Song<br>Accept Call              |   Previous Song<br>Reject/End Call        |
|   Next Album<br>(USB Sequential Only)   |   Previous Album<br>(USB Sequential Only) |

## DAB/DAB+ Setup Pushbutton Actions\*\*

- |   |   |
|---|---|
|   DAB Setup /<br>DAB Edit     |   Quick Scan /<br>DAB Reset |
|   DAB Scan /<br>DAB Setup End |   Status Voice Assist       |
|   Add Station                 |   Remove Station            |
|   Next Station                |   Previous Station          |
|   Next Ensemble               |   Previous Ensemble         |

↓ Quick press      ↓ Press 1 second      ↓ Press & hold

**Note:** All Pushbutton Actions can be used in place of or in tandem with the standard Control Actions.

\* See Advanced Features Guide. AVC pushbutton action only available when not in DAB radio mode. Next/Previous EQ/AVC only available when in radio mode and EQ or AVC Adjust modes. To enter Adjust mode, continue to hold pushbutton when turning EQ/AVC On until radio announces Adjust mode.

\*\* Radio must be in DAB/DAB+ operating mode. Once DAB Setup/Edit mode is entered, all other Pushbutton actions are overridden by DAB Pushbutton actions. See Advanced Features Guide (AVC pushbutton action only available when not in DAB radio mode). Any attached USB or connected Bluetooth devices will be disabled during DAB Setup. They will automatically return to normal operation when DAB Setup has ended. DAB Reset available when in DAB Setup mode.

\*\*\* Immediately after turning radio on, press and hold button for 12 seconds. All radio settings including saved HD Radio™ sub-channels and Bluetooth pairings/custom name will be reset.

HD Radio™ Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents see <http://dts.com/patents>. HD Radio, Artist Experience, and the HD, HD Radio, and "ARC" logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.